

BATTERY DISCONNECT / CONNECT INSTRUCTION

This brief instruction is to be placed on the passenger seat of the vehicle to be loaded with NYK to **Long Beach, CA or Port Hueneme, CA or San Diego, CA** with the following information:

1. Location of the starter battery for disconnection/re-connection in vehicle

Starter battery is located at the trunk / spare-tire-area under the cover
as shown on the picture:



2. Instructions on how to disconnect/connect the negative terminal of the battery

Will need a 10mm wrench for disconnect / connect

3. Any restrictions once the battery is disconnected (i.e., if the hood, trunk or doors are closing automatically after disconnection → can they still be accessed and if yes, how?)

Since trunk is electrical opened, the area needs to be accessed via the rear-seat to connect the battery again

Access to the battery needs to be possible at any time. Therefore, automatic lock-system has to be disconnected / disabled prior to drop-off. If this is not the case the vehicle will not be allowed to be loaded onboard of the ocean-vessel for vessel- and cargo-security.

Any vehicle that DOES NOT have these instructions on the passenger seat WILL NOT BE ACCEPTED for shipment based on the safety regulations of the Ocean-carrier / Vessel-owner.